

[Skip to content](#)

Manuals+

User Manuals Simplified.



Beldray Climate Cube Instruction Manual

Home » [Beldray](#) » Beldray Climate Cube Instruction Manual 

Contents [[hide](#)]

- [1 Beldray Climate Cube Instruction Manual](#)
- [2 Safety Instructions](#)
- [3 Thermal Cut-out Device](#)
- [4 Care and Maintenance](#)
- [5 Description of Parts](#)
- [6 Instructions for Use](#)
- [7 Using the Climate Cube](#)
- [8 Storage](#)
- [9 Specifications](#)
- [10 ERP Table](#)
- [11 UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.](#)
- [12 Guarantee](#)
- [13 Connection to the mains](#)
- [14 Important](#)
- [15 Non-rewireable mains plug](#)
- [16 Read More About This Manual & Download PDF:](#)
- [17 File Downloads](#)
- [18 Related Manuals](#)

Beldray Climate Cube Instruction Manual



Safety Instructions

When using electrical products, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply. Children younger than 3 years old should be kept away from the product unless continuously supervised. Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised. This is not a toy – children should be supervised to ensure they do not play with the product. Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Normal voltage is still present in this product as long as the product is connected to the electrical source. This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped

or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the product and its power supply cord out of the reach of children while plugged in, switched on, or cooling down and away from heat or sharp edges that could cause damage.

This includes any parts of the product that may become hot during use and other heat emitting products. Keep furniture, curtains and other flammable material at least 1 metre away from the product. Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not leave the product plugged in or operating overnight.

Do not use the product for anything other than its intended use.

Do not block the air intake of the product; place in an open, well-ventilated space.

Do not use this product outdoors.

Do not attempt to move the product whilst it is in use.

Do not put objects into any of the openings.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function. This includes insecticide and chemical solvents. Only lift the product with the carry handles provided.

The product should be used on a stable, heat-resistant surface.

The product must not be located immediately below or next to a mains power supply. Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product. Use of an extension cord with the product is not recommended. This product is intended for domestic use only. It should not be used for commercial purposes



Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

~ Hot surface – do not touch the hot section or heating – components of the product



Warning: In order to avoid overheating, do not cover ~ the product.

Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Should the product fall or be pushed over while there is water in the tank, it must be unplugged from the mains outlet immediately as a first action. The unit should be righted promptly and dried thoroughly before it is used again.

This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Thermal Cut-out Device

The climate controller is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the climate controller start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

STEP 1: Switch off the climate controller by pressing the power switch on the bottom of the back panel.

STEP 2: Unplug the climate controller from the mains power supply and allow it to cool for approx. 15 minutes.

STEP 3: Clear any blockages present in the vent, being careful not to cause damage.

STEP 4: Plug in and switch on the climate controller at the mains power supply.

Caution: In order to avoid a hazard due to inadvertently tripping the thermal cut-out, this climate controller must not

be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit that is regularly switched on and off by the utility.

Care and Maintenance

Always unplug the climate controller from the mains power supply and allow to cool sufficiently before performing any cleaning or maintenance.

Wipe the climate controller with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the climate controller.

Do not immerse the climate controller in water or any other liquid.

To remove the fibre-paper filter for cleaning or replacement, the front grill should be carefully removed. To do this, remove the grill screw from the top of the grill using a cross-head screwdriver. The control dial should then be turned to the cooling function so that the filter is accessible. By carefully pulling the white tab on top of the filter, the filter can be removed. Rinse under cold clean water, and replace the filter back into the main unit. To properly fit the filter, place it back inside when the control dial is on 'fan' mode to avoid it falling back into the filter frame. Carefully replace the front grill, making sure not to damage the grill fins, and replace the grill screw.

Description of Parts



1. Climate Cube main unit

2. Front grill

3. Control dial

4. Heating function

5. Cooling function

6. Fan function

7. Speed selector button

8. Heat output selector button

9. Power button

10. Power switch

Instructions for Use

Before First Use

Position the climate controller on a flat, stable, heat-resistant surface in an open space. Make sure the climate controller is at least 1 metre away from furniture, curtains or any other flammable materials. Do not block the air intake on the back of the climate controller.

Note: When using the climate controller for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the climate controller.

Using the Climate Cube

STEP 1: Plug in and switch on the climate controller at the mains power supply.

STEP 2: Flick the power switch on the bottom of the back panel to the 'on' position.

STEP 3: Press the power button on the control panel. This will turn on the climate controller.

Using the Cooling, Heating or Fan Function The climate controller has three functions:

Cooling



Heating



Fan



STEP 1: Turn the control dial and select the desired function. The climate controller will begin to operate. To increase the output, press the speed selector button; 'I' represents the lower output and 'II' represents the higher output.

STEP 2: To switch off the climate controller, hold down the power button.

Note: For the cooling and fan functions, the climate controller will enter evaporation mode immediately after being switched off. During the evaporation period, the climate controller continues to blow air until the evaporation pad has dried out. This is to reduce the chance of build-up on the evaporation pad.

To use the cooling function, switch off and unplug the climate controller from the mains power supply. Using a suitable vessel, cold, clean water should be poured into the tank behind the control dial on top of the unit. Make sure not to spill water onto the control dial whilst pouring. For the heating function, the climate controller will enter cool down mode immediately after being switched off. During the cool down period, the heating element is turned off but the climate controller continues to blow air. The climate controller automatically turns off after 30 seconds.

Storage

Check that the climate controller is completely cool before storing in a cool, dry place. Never wrap the cord tightly around the climate controller; wrap it loosely to avoid causing damage.

Specifications

Product code: EH3327

Voltage: 220-240V – 50 Hz

Power: S00W

ERP Table

Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input for electric storage local space heaters only (select one).	
Nominal heat output	P_{nom}	0.5	kW	Manual heat charge control, with integrated thermostat.	N
Nominal heat output (indicative)	P_{min}	N/A	kW	Manual heat charge control with room and/or outdoor temperature feedback.	N
Maximum continuous heat output	$P_{max,c}$	0.5	kW	Electronic heat charge control with room and/or outdoor temperature feedback.	N
Auxiliary electricity consumption				Fan assisted heat output.	
At nominal heat output	el_{nom}	N/A	kW	Type of heat output/room temperature control (select one).	
At minimum heat output	el_{min}	N/A	kW	Single stage heat output in no room temperature control.	N
In standby mode	el_{sb}	0.45	kW	Two or more manual stages, no room temperature control.	N
				With mechanic thermostat room temperature control.	Y
				With electronic room temperature.	N
				Electronic room temperature control plus day timer.	N
				Electronic room temperature control plus week timer.	N
				Other control options (multiple selections possible).	
				Room temperature control, with presence detection.	N
				Room temperature control, with open window detection.	N
				With distance control option.	N
				With adaptive start control.	N
				With working time limitation.	N
				With black bulb sensor.	N

UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee. Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc. Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website. Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY – Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal. Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug


If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to

BS 1362 of the same rating). If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

Read More About This Manual & Download PDF:

File Downloads

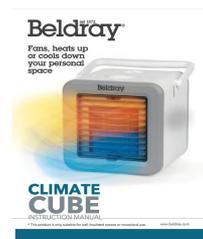

Instruction Manual [Download](#) [optimized]
Climate Cube [Download](#)

Related Manuals

1. [Beldray cordless Powerful versatile vacuum cleaner Instruction Manual](#) cordless Powerful versatile vacuum cleaner...
2. [Beldray Airspire Cordless Vacuum BEL0990 User Manual](#) User Manual Beldray Airspire Cordless Vacuum BEL0990 Our powerful, cordless...
3. [Breville The All Climate Dehumidifier LAD250 Instruction Booklet](#) Breville The All Climate Dehumidifier LAD250 Instruction Booklet Instruction Book...
4. [Homedics FAC-420 Duo Climate Hot and Cold Sonic Facial Wand Instruction Manual and Warranty Information](#) Instruction Manual and Warranty Information Homedics FAC-420 Duo Climate Hot...
5. [Stackable 9 Cube Organizer Installation Instruction Manual](#) Stackable 9 Cube Organizer Installation Instructions BEFORE BEGINNING Please read...
6. [artika Light LED Pendant Crystal Cube Instruction Manual](#) INSTRUCTION MANUAL Artika For Living Inc. 1756, 50th Avenue Montréal...